

Storage

This chapter explains Storage and how to set it up..

Contents

- 1. Plantview Storage overview 1
- 2. Setup Plantview Storage..... 2


Use Plantview Administration

1. Plantview Storage overview

Storage is disk space that belongs and is fully administered by the user.

Storage is used to

- Archive and Backup your data
- Sync data between workstations
- Sync data to plantview.cloud (minimized data transfer)

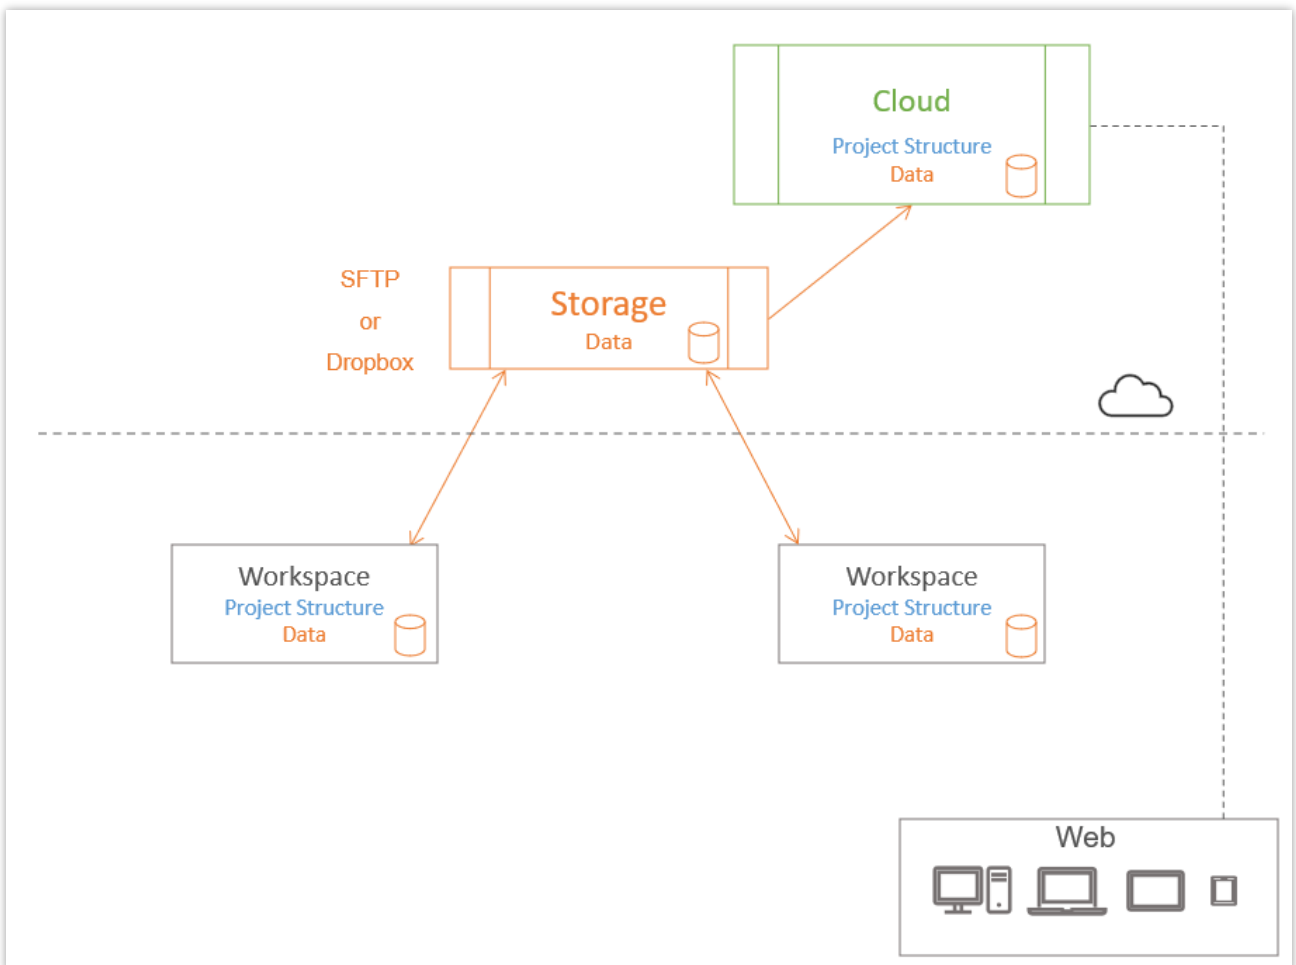


2. Setup Plantview Storage

To use Plantview Storage you need to first set it up in the Administration section.

Go to Menu/**Administration** to enter the Administration section.

You can also access Plantview Administration by directly visiting www.plantview.de.

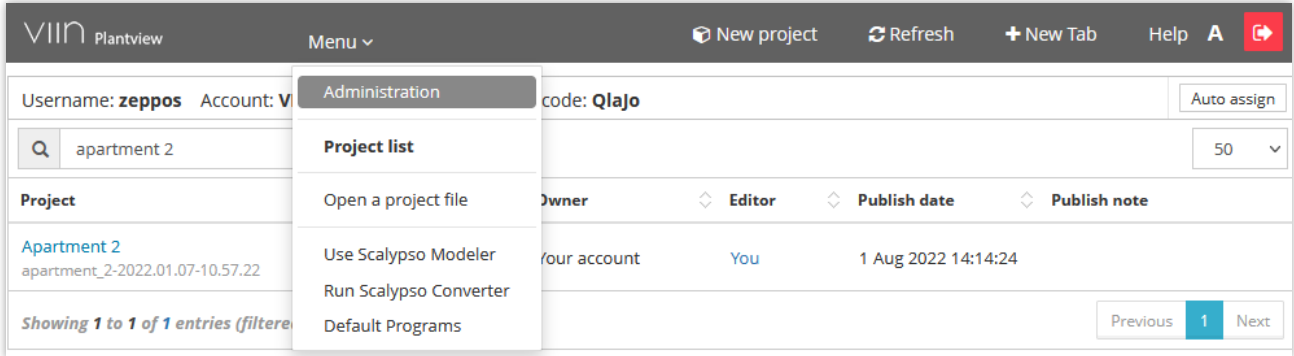

Press Storage/**Set up**

Enter all the necessary fields to connect your personal storage space, save, and verify by pressing Connect.

